

# PROFITEST | MASTER Series PROFITEST | MBASE MTECH DIN VDE 0100/IEC 60364-6 Testers



3-349-471-03 22/2.14

#### Testing of residual current devices (RCCBs)

- Measurement of contact voltage without tripping the RCCB.
   Contact voltage is measured with reference to nominal residual current using 1/3 of the nominal residual current value.
- Testing for N-PE reversal
- Tripping test with nominal residual current, trip time measurement
- Testing of equipment and RCCBs with rising residual current including indication of tripping current and contact voltage
- Testing of RCCBs with

 $\frac{1}{2} \bullet I_{\Delta N}$ ,  $1 \bullet I_{\Delta N}$ ,  $2 \bullet I_{\Delta N}$ , (5 •  $I_{\Delta N}$  to 100 mA nominal current)

#### **Testing of Special RCDs**

- Testing of selective S SRCDs, PRCDs (SCHUKOMAT, SIDOS or comparable), type G/R, type AC, type A, F; type B and B+ (except PROFITEST MBASE)
- Testing of RCCBs which are suitable for pulsating residual direct current; testing is conducted with positive or negative half-waves.
- Intelligent data transfer
   Bidirectional interface to DDS-CAD electronic engineering



Simulation of operating states of electric vehicles at electric charging stations

New! in combination with the MENNEKES test box (PROFITEST MTECH only)

# DAKKS German Accreditation Body D-K-15080-01-01 DAKKS Calibration Certificate as Standard Feature

#### Large Voltage and Frequency Ranges

A broad-range measuring device allows for use of the test instrument in all alternating and 3-phase electrical systems with voltages from 65 to 500 V and frequencies of 16 to 400 Hz.

#### Loop and Line Impedance Measurement

Measurement of loop and line impedance can be performed in the 65 to 500 V range. Conversion to short-circuit current is based on the respective nominal line voltage, insofar as the measured line voltage is within the specified range. **PROFITEST MASTER** measuring error is also taken into account for conversion. Outside of this range, short-circuit current is calculated on the basis of momentary line voltage and measured impedance.

## $\label{thm:local_problem} \mbox{Measurement of Insulation Resistance Using Nominal Voltage, with Variable or Rising Test Voltage}$

Insulation resistance is usually measured with a nominal voltages of 500, 250 or 100 V. A test voltage which deviates from nominal voltage, and lies within a range of 50 to 1000 V, can be selected for measurements at sensitive components, as well as systems with voltage limiting devices.

Measurement can be performed with a constantly rising test voltage in order to detect weak points in the insulation and determine tripping voltage for voltage limiting devices.

Voltage at the device under test and any triggering/breakdown voltage appear at the test instrument's display.

#### Standing-Surface Insulation Measurement

Standing-surface insulation measurement is performed with momentary line frequency and line voltage.

#### Low-Resistance Measurement

DESIGN PLUS

Bonding conductor resistance and protective conductor resistance can be measured with a test current of  $\geq$  200 mA DC, automatic polarity reversal of the test voltage and selectable direction of current flow. If the adjustable limit value is exceeded, an LED lights up.

#### **Earthing Resistance Measurement**

In addition to earth resistance measurement, a selective earth resistance measurement is possible with the **PROFITEST MTECH** in combination with accessory current clamps.

#### **Universal Connector System**

The interchangeable plug inserts and 2-pole plug-in adapter – which can be expanded to 3-poles for phase sequence testing – allows for use of the test instrument all over the world.

#### **Special Features**

- · Display of approved fuse types for electrical systems
- Energy meter start-up testing
- Measurement of biasing, leakage and circulating current of up to 1 A, as well as working current of up to 1000 A with current clamp sensor (available as an accessory)
- Phase sequence measurement (including highest line-to-line voltage)
- PROFITEST MBASE: automatic test sequence function specified in the device for measuring of RCDs Type A
- Mew! PROFITEST MTECH: automatic test sequence function specified in the device for measuring of RCDs Type A and B as well as loop impedances with DC-Offset and positive half wave

#### Display with Selectable Language

The LCD panel consists of a backlit dot matrix at which menus, setting options, measurement results, tables, instructions and error messages, as well schematic diagrams appear.

The display can be set to the desired language depending on the country in which the test instrument is used:

D, GB, I, F, E, P, NL, S, N, FIN, CZ or PL

#### Operation

Device functions are selected directly with the help of a rotary selector knob. Softkeys allow for convenient selection of subfunctions and parameter settings. Unavailable functions and parameters are automatically prevented from appearing at the display.

The start and RCD tripping functions included directly on the instrument are identical to the functions of the two keys located on the test plug, allowing for easy measurement at difficult to access locations.

Schematic diagrams, measuring ranges and help texts cab be displayed for all basic functions and sub-functions.

#### **Phase Tester**

Protective conductor potential is tested after starting a test sequence and touching the contact surface for finger contact. The PE symbol appears at the display if a potential difference of more than 25 V is detected between the contact surface and the protective contact at the mains plug.

#### **Error Indication**

- The instrument automatically detects **instrument-to-system con- nection errors**, which are indicated in a connection pictograph.
- Errors within the electrical system (no mains or phase voltage, tripped RCD) are indicated at 3 LEDs and by means of popup windows at the tilting LCD panel.

#### **Battery Monitoring and Self-Test**

Battery monitoring is conducted while the instrument is subjected to an electrical load. Results are displayed both numerically and with a symbol. Test images can be called up one after the other, and LEDs can be tested during the self-test. The instrument is shut down automatically when the rechargeable batteries are discharged. A microprocessor controlled charging circuit is used to assure safe charging of rechargeable NiMH or NiCd batteries.

#### Data Entry at the RS 232 Port

Data can be read in via a barcode or RFID scanner connected to the RS 232 port, and comments can be entered with the help of the softkeys.

#### ETC User Software for PC

ETC offers a wide variety of support options for data acquisition and management.

- Amongst other things, the software acquires all important data for reports in accordance with DIN VDE 0100, part 600.
- Test reports (ZVEH) can be generated automatically.
- Distribution structures with electrical circuit and RCD data can be individually defined.
- Created structures can be saved to memory and loaded to the test instrument as required via the USB port.
- Data can be exported to Excel, CSV and XML formats.
- Device selection lists can be edited.

## Overview of Features Included with PROFITEST MASTER Device Variants

Article number    M520M   M520M   M520M   M520M   M520M   M520M   Testing of residual current devices (RCDs)   V	PROFITEST	MBASE	MPRO	Мтесн	MXTRA
Testing of residual current devices (RCDs)  U <sub>B</sub> measurement without RCD tripping  Tripping time measurement  A			-		
Ug measurement without RCD tripping Tripping time measurement Tripping to Tripping current I <sub>F</sub> Selective, SRCDs, PRCDs, type B, type B+ Tripping Tripping to Tripping Tripping Tripping Tripping the RCDs Tripping the RCD, tuse table Tripping terming method (2/3-wire measuring method (					
Tripping time measurement  Measurement of tripping current I <sub>IF</sub> Selective, SRCDs, PRCDs, type G/R  AC/DC sensitive RCDs, type B, type B+  Testing IMDs  Testing of RCMs  Testing of N-PE reversal  Measurement of loop impedance Z <sub>L-PE</sub> / Z <sub>L-N</sub> Fuse table for systems without RCDs  Without tripping the RCD, fuse table  To Matest current¹, no RCD tripping  Earthing resistance R <sub>E</sub> (mains operation)  1-U measuring method (2/3-wire measuring method via measuring method via PRO-RE adapter yerre/2-wire + probe)  Earthing resistance R <sub>E</sub> (mains operation)  3 or 4-wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter of via the wire measuring method via PRO-RE adapter and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (battery operation) with 2-clamps (current clamp sensor of the via t		1	1	1	1
Measurement of tripping current I <sub>F</sub> Selective, SRCDs, type B, type B, type B+  Testing IMDs  Testing of RCMs  Testing of RCMs  Testing of RCMs  Testing for N-PE reversal  Measurement of loop impedance Z <sub>L-PE</sub> / Z <sub>L-N</sub> Fuse table for systems without RCDs  Without tripping the RCD, fuse table  15 mA test current¹, no RCD tripping  Earthing resistance R <sub>E</sub> (mains operation)  1-U measuring method (2/3-wire measuring method via measuring method via PRO-RE adapter  Soil resistivity p <sub>E</sub> (battery operation) 3 or 4-wire measuring method via PRO-RE adapter  Soil resistivity p <sub>E</sub> (battery operation) 4 (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)  Selective earthing method via PRO-RE adapter and current clamp sensor (3-wire)  Selective earthing method via PRO-RE adapter and current clamp sensor (1-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>LOOP</sub> (battery operation) with 2-clamps (current clamp sensor)  Earth loop resistance R <sub>LOOP</sub> (battery operation) with 2-clamps (adapter) sensor direct and current clamp sensor)  Weasurement of equipotential bonding R <sub>LO</sub> automatic polarity reversal  Insulation resistance R <sub>EOO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> I <sub>AMP</sub> Phase sequence  V V V V  Special measurements  Leakage current with PRO-AB adapter  Earth leakage resistance R <sub>E(SO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Voltage frop  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (EC 61851)  Peatures  Selectable user interface language 3  V V V V V V V V V V V V V V V V V V		-			
Selective, SRCDs, PRCDs, type B, type B+  AC/DC sensitive RCDs, type B, type B+  Testing IMDs  Testing IMDs  Testing for RCMS  Testing for RPE reversal  Measurement of loop impedance Z <sub>L-PE</sub> / Z <sub>LN</sub> Fuse table for systems without RCDs  Without tripping the RCD, fuse table  LS mA test current¹, no RCD tripping  Earthing resistance R <sub>E</sub> (mains operation)  I-U measuring method (2/3-wire measuring method via measuring adapter: 2-wire/2-wire + probe)  Earthing resistance R <sub>E</sub> (mains operation)  Gavine measuring method via PRO-RE adapter  Soil resistivity P <sub>E</sub> (battery operation)  (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (mains operation)  (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (mains operation)  with 2-ploe adapter, probe, earth electrode and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (battery operation)  with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  (4-wire measuring method via PRO-RE adapter and current clamp sensor)  (4-wire measuring method via PRO-RE adapter and current clamp sensor)  (4-wire measuring method via PRO-RE adapter and current clamp sensor)  (4-wire measuring method via PRO-RE adapter operation)  with 2 clamps (current clamp sensor direct and current clamp sensor)  (4-wire measuring method via PRO-RE adapter and current clamp sensor)  (4-wire measuring method via PRO-RE adapter operation)  with 2 clamps (current clamp sensor direct and current clamp sensor)  (4-wire measuring method via PRO-RE adapter operation)  with 2 clamps (current clamp sensor)  (4-wire measuring method via PRO-RE adapter operation)  with 2 clamps (current clamp sensor)  (4-wire measuring method via PRO-RE adapter operation)  with 2 clamps (current clamp sensor)  (4-wire measuring method via PRO-RE adapter operation)  with 2 clamps (current clamp sensor)  (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (so)  V V V		-	1	-	
AC/DC sensitive RCDs, type B, type B+	• 1	-	-	-	
Testing IMDs Testing of RCMs Testing for N-PE reversal  Measurement of loop impedance Z <sub>L-PE</sub> / Z <sub>L-N</sub> Fluse table for systems without RCDs Without tripping the RCD, fuse table  15 mA test current¹, no RCD tripping  Earthing resistance R <sub>E</sub> (mains operation) 11 measuring method v/2 N-wire measuring method via measuring method via PRO-RE adapter  Soil resistivity p <sub>E</sub> (battery operation) 3 or 4-wire measuring method via PRO-RE adapter)  Soil resistivity p <sub>E</sub> (battery operation) 4(-wire measuring method via PRO-RE adapter)  Soil resistivity p <sub>E</sub> (battery operation) 4(-wire measuring method via PRO-RE adapter)  Soil resistivity p <sub>E</sub> (battery operation) 4(-wire measuring method via PRO-RE adapter)  Soil resistivity p <sub>E</sub> (battery operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (mains operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2-pole adapter, probe, earth electrode and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2-pole adapter and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2-pole adapter and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> automatic polarity reversal  Insulation resistance R <sub>ELOOP</sub> Measurement of equipotential bonding R <sub>LO</sub> automatic polarity reversal  Insulation resistance R <sub>ELOOP</sub> Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> I <sub>AMP</sub> Phase sequence  V V V V V V  Leakage current with PRO-AB adapter  Earth leakage resistance R <sub>ELOOP</sub> Standing-surface insulation Z <sub>ET</sub> Meter start-up  Leakage current with PRO-AB ad	, , , , , , , , , , , , , , , , , , , ,	_	_		
Testing of RCMs Testing for N-PE reversal  Measurement of loop impedance Z <sub>L-PE</sub> / Z <sub>L-N</sub> Fuse table for systems without RCDs Without tripping the RCD, fuse table  To make the current¹, no RCD tripping  Earthing resistance R <sub>E</sub> (mains operation) I-U measuring method (2/3-wire measuring method via measuring adapter: 2-wire/2-wire + probe)  Earthing resistance R <sub>E</sub> (battery operation) 3 or 4-wire measuring method via PRO-RE adapter 5 oli resistivity p <sub>e</sub> (battery operation) (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (battery operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor)  Earth loor resistance R <sub>E, loop</sub> (battery operation) with 2-clamps (current clamp sensor direct and current clamp sensor)  Earth loor resistance R <sub>E, loop</sub> (battery operation) with 2-clamps (current clamp sensor direct and current clamp sensor)  Earth loor resistance R <sub>E, loop</sub> (battery operation) with 2-clamps (current clamp sensor direct and current clamp sensor)  Features  Leakage current (clamp) I <sub>L</sub> I <sub>MMP</sub>				_	
Testing for N-PE reversal  Measurement of loop impedance Z <sub>L-PE</sub> / Z <sub>L-N</sub> Fuse table for systems without RCDs  Without tripping the RCD, fuse table  15 mA test current¹, no RCD tripping  Earthing resistance R <sub>E</sub> (mains operation)  I-U measuring method (2/3-wire measuring method via measuring adapter: 2-wire/2-wire + probe)  Earthing resistance R <sub>E</sub> (battery operation) 3 or 4-wire measuring method via PRO-RE adapter  Soil resistivity p <sub>E</sub> (battery operation) 4 (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>E (ob</sub> (battery operation) with 2 clamps (current clamp sensor drawn					-
Measurement of loop impedance Z <sub>L-PE</sub> / Z <sub>L-N</sub> Fuse table for systems without RCDs  Without tripping the RCD, fuse table  15 mA test current¹, no RCD tripping  Earthing resistance R <sub>E</sub> (mains operation)  I-U measuring method ⟨2/3-wire measuring method via measuring adapter: 2-wire/2-wire + probe)  Earthing resistance R <sub>E</sub> (battery operation) 3 or 4-wire measuring method via PRO-RE adapter  Soil resistivity ρ <sub>E</sub> (battery operation) (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (mattery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor (3-wire)  Earth loop resistance R <sub>E,OOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp sensor)  Heasurement of equipotential bonding R <sub>LO</sub> variable or rising test voltage (ramp)  Woltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E(SO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Weter start-up  Leakage current with PRO-AB adapter  Residual voltage test Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Peatures  Selectable user interface language 3  V V V V  Automatic test sequence function  Patabases for up to 50,000 objects  Automatic test sequence function  V V V V  CAT III 500 V / CAT IV 300 V				1	
Fuse table for systems without RCDs  Without tripping the RCD, fuse table  15 mA test current¹, no RCD tripping  Earthing resistance R <sub>E</sub> (mains operation) I-U measuring method (2/3-wire measuring method via measuring adapter: 2-wire/2-wire + probe)  Earthing resistance R <sub>E</sub> (battery operation) 3 or 4-wire measuring method via PRO-RE adapter  Soil resistivity p <sub>E</sub> (battery operation) 3 or 4-wire measuring method via PRO-RE adapter  Selective earthing resistance R <sub>E</sub> (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire) Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (3-wire) Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (3-wire) Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (3-wire) Selective earthing resistance R <sub>E,OOP</sub> (battery operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire) Selective earthing resistance R <sub>E,OOP</sub> (battery operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire) Selective earthing resistance R <sub>E,OOP</sub> (battery operation) with 2-pole adapter and current clamp sensor (3-wire) Selective arthing resistance R <sub>E,OOP</sub> (battery operation) with 2-pole adapter and current clamp sensor direct and current clamp tensor (3-wire) Selective device real probability reversal linsulation resistance R <sub>E,OOP</sub> variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Voltage Gurrent (clamp) I <sub>L-</sub> I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E</sub> (SO)  Voltage drop  Standing-surface insulation Z <sub>ST</sub> Voltage drop  Voltage Gurrent with PRO-AB adapter  Residual voltage test Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Voltage Gurrent with PRO-AB adapter  Residual voltage test Intelligent ramp  Elec		-	•		•
Without tripping the RCD, fuse table					
15 mA test current¹, no RCD tripping  Earthing resistance R <sub>E</sub> (mains operation) I-U measuring method (2/3-wire measuring method via measuring adapter: 2-wire/2-wire + probe)  Earthing resistance R <sub>E</sub> (battery operation) 3 or 4-wire measuring method via PRO-RE adapter  Soil resistivity p <sub>E</sub> (battery operation) (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2-clamps (current clamp sensor direct and current clamp sensor of dect and current clamp sensor of dect and current clamp sensor of resistance R <sub>ELOOP</sub> (battery operation) with 2-clamps (current clamp sensor direct and current clamp sensor of resistance R <sub>ELOOP</sub> (battery operation) with 2-clamps (current clamp sensor direct and current clamp sensor of via year and current clamp sensor of via year and current clamp sensor of via year and current clamps sensor of via year and current clamps sensor of via year year and current of equipotential bonding R <sub>LO</sub> year year year year year year year year		/	/	/	/
Earthing resistance R <sub>E</sub> (mains operation) I-U measuring method (2/3-wire measuring method via measuring adapter: 2-wire/2-wire + probe)  Earthing resistance R <sub>E</sub> (battery operation) 3 or 4-wire measuring method via PRO-RE adapter  Soil resistivity p <sub>E</sub> (battery operation) (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>E, (operation)</sub> (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>E, (operation)</sub> with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> I <sub>AMP</sub> Phase sequence  John Mall PRO-AB adapter  Residual voltage test insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language 3  John Mall PRO-Mall PRO-Mal				/	/
-U measuring method (2/3-wire measuring method via measuring adapter: 2-wire/2-wire + probe)		/	/	/	/
method via measuring adapter: 2-wire/2-wire + probe)  Earthing resistance R <sub>E</sub> (battery operation) 3 or 4-wire measuring method via PRO-RE adapter  Soil resistivity p <sub>E</sub> (battery operation) (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> , automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Voltage drop  Earth leakage resistance R <sub>E(ISO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Earth leakage resistance insulations (IEC 61851)  Features  Selectable user interface language 3  V V V V  Features  Selectable user interface language 3  V V V V  Selective earthing resistance function  V V V V  Selective Software for PC  V V V V V V V  V V V V V V  CAT III 500 V / CAT IV 300 V	Earthing resistance R <sub>E</sub> (mains operation)				
## Proble  ## Earthing resistance Re (battery operation)  ## 3 or 4-wire measuring method via PRO-RE adapter  ## Soil resistivity ρε (battery operation)  ## (4-wire measuring method via PRO-RE adapter)  ## Selective earthing resistance Re (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)  ## Selective earthing resistance Re (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  ## Earth loop resistance Retoop (battery operation) with 2 clamps (current clamp sensor direct and current clamp sensor)  ## Measurement of equipotential bonding Retorem variable or rising test voltage (ramp)  ## Voltage Ut-N / Ut-Pe / UN-Pe / f  ## Special measurements  ## Leakage current (clamp) It, I <sub>AMP</sub> ## Phase sequence  ## Earth leakage resistance Retoop  ## Voltage drop  ## Standing-surface insulation Z <sub>ST</sub> ## Weter start-up  ## Leakage current with PRO-AB adapter  ## Residual voltage test  ## Intelligent ramp  ## Electric vehicles at charging stations (IEC 61851)  ## Features  ## Selectable user interface language ** /* /* /* /* /* /* /* /* /* /* /* /*		/	/	1	1
Earthing resistance R <sub>E</sub> (battery operation) 3 or 4-wire measuring method via PRO-RE adapter  Soil resistivity p <sub>E</sub> (battery operation) (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> , automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E(SO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language <sup>3</sup> V V V V  Salabase for up to 50,000 objects  Automatic test sequence function  V V V V  Salabase for PC  V V V V  CAT III 500 V / CAT IV 300 V					
3 or 4-wire measuring method via PRO-RE adapter  Soil resistivity pc (battery operation) (4-wire measuring method via PRO-RE adapter)  Selective earthing resistance R <sub>E</sub> (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> , automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  Zearth leakage resistance R <sub>E(SO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language 3  Zeatures  Selectable user interface language 3  Automatic test sequence 4  Zeatures  Selectable user interface language 3  Automatic test sequence function 5  RS 232 port for RFID/barcode scanner 7  Zeatures  Selectable user for PC 7  CAT III 500 V / CAT IV 300 V					
Soil resistivity \( \rho_E \) (battery operation) (4-wire measuring method via PRO-RE adapter)   Selective earthing resistance \( R_E \) (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)   Selective earthing resistance \( R_E \) (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)   Selective earth leoctrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)   Searth loop resistance \( R_{ELOOP} \) (battery operation) with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)   Measurement of equipotential bonding \( R_{LO} \) automatic polarity reversal   Insulation resistance \( R_{ISO} \) variable or rising test voltage (ramp)   Voltage \( U_{L-N} / U_{L-PE} / U_{N-PE} / f \)    Special measurements   Leakage current (clamp) \( I_L \) \( I_{AMP} \)   V   V   V   V   Voltage drop    Standing-surface insulation \( Z_{ST} \)   V   V   V   V   V   V   V   V   V	2 or 4 wire measuring method via PPO DE adapter	_	1	_	1
C4-wire measuring method via PRO-RE adapter					
Selective earthing resistance R <sub>E</sub> (mains operation) with 2-pole adapter, probe, earth electrode and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> , automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E(SO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language <sup>3</sup> V V V V V V V V V V V V V V V V V V V		_	1	_	1
tion) with 2-pole adapter, probe, ēarth electrode and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> , automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E(SO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language 3  V J J J J J J J J J J J J J J J J J J					
and current clamp sensor (3-wire)  Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> , automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E(ISO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language <sup>3</sup> V J J  V J  V J  V J  V J  V J  V J	tion) with 2-note adapter probe earth electrode	./	./	./	./
Selective earthing resistance R <sub>E</sub> (battery operation) with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> , automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E(ISO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language 3  Database for up to 50,000 objects  Automatic test sequence function  RS 232 port for RFID/barcode scanner  V A A A A A A A A A A A A A A A A A A					
with probe, earth electrode and current clamp sensor (4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> , automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E(ISO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language 3  Database for up to 50,000 objects  Automatic test sequence function  RS 232 port for RFID/barcode scanner  V					
(4-wire measuring method via PRO-RE adapter and current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> , automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E(ISO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language 3  Database for up to 50,000 objects  Automatic test sequence function  RS 232 port for RFID/barcode scanner  V V V V V V V V V V V V V V V V V V V					
current clamp sensor)  Earth loop resistance R <sub>ELOOP</sub> (battery operation) with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> , automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  2		_	/	_	/
with 2 clamps (current clamp sensor direct and current clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>LO</sub> , automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E(ISO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language <sup>3</sup> Variable or rising test voltage (ramp)  Variable	current clamp sensor)				
rent clamp transformer via PRO-RE/2)  Measurement of equipotential bonding R <sub>L0</sub> , automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E(ISO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language 3  Database for up to 50,000 objects  Automatic test sequence function  RS 232 port for RFID/barcode scanner  USB port for data transmission  Bluetooth® interface  ETC User Software for PC  CAT III 500 V / CAT IV 300 V					
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$		_	1	_	1
automatic polarity reversal  Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / I V <sub>N-PE</sub> / f					
Insulation resistance R <sub>ISO</sub> , variable or rising test voltage (ramp)  Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E(ISO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language <sup>3</sup> Automatic test sequence function  RS 232 port for RFID/barcode scanner  USB port for data transmission  Bluetooth® interface  ETC User Software for PC  CAT III 500 V / CAT IV 300 V		/	/	1	1
variable or rising test voltage (ramp)  Voltage $U_{L-N} / U_{L-PE} / I_{N-PE} / I_{N-P$					
Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f  Special measurements  Leakage current (clamp) I <sub>L</sub> , I <sub>AMP</sub> Phase sequence  Earth leakage resistance R <sub>E(ISO)</sub> Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test	Insulation resistance R <sub>ISO</sub> ,	1	1	1	1
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$					
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	Voltage U <sub>L-N</sub> / U <sub>L-PE</sub> / U <sub>N-PE</sub> / f	/		<i>,</i>	
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$					
Earth leakage resistance $R_{E(ISO)}$			1	✓	-
Voltage drop  Standing-surface insulation Z <sub>ST</sub> Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language 3  V  Database for up to 50,000 objects  Automatic test sequence function  RS 232 port for RFID/barcode scanner  USB port for data transmission  V  V  V  V  CAT III 500 V / CAT IV 300 V		1	1	✓	1
Standing-surface insulation Z <sub>ST</sub> Wheter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language 3  Database for up to 50,000 objects  Automatic test sequence function  RS 232 port for RFID/barcode scanner  USB port for data transmission  V V V  Bluetooth® interface  ETC User Software for PC  CAT III 500 V / CAT IV 300 V	Earth leakage resistance R <sub>E(ISO)</sub>	1	1	✓	1
Meter start-up  Leakage current with PRO-AB adapter  Residual voltage test  Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language 3  V V V  Database for up to 50,000 objects  Automatic test sequence function  RS 232 port for RFID/barcode scanner  USB port for data transmission  V V V  Bluetooth® interface  ETC User Software for PC  CAT III 500 V / CAT IV 300 V		1	✓	1	1
Leakage current with PRO-AB adapter	Standing-surface insulation Z <sub>ST</sub>	1	/	✓	✓
Residual voltage test	Meter start-up	1	1	1	1
Intelligent ramp  Electric vehicles at charging stations (IEC 61851)  Features  Selectable user interface language <sup>3</sup> Database for up to 50,000 objects  Automatic test sequence function  RS 232 port for RFID/barcode scanner  USB port for data transmission  JUSB port for data transmission  JUSB port for GETO User Software for PC  CAT III 500 V / CAT IV 300 V	Leakage current with PRO-AB adapter	_	_	_	1
Electric vehicles at charging stations (IEC 61851) —	Residual voltage test	_	_	_	1
Electric vehicles at charging stations (IEC 61851) —	Intelligent ramp	_	_	_	/
Features  Selectable user interface language 3		_	_	/	1
Selectable user interface language <sup>3</sup> Database for up to 50,000 objects  Automatic test sequence function  RS 232 port for RFID/barcode scanner  USB port for data transmission  Bluetooth <sup>®</sup> interface  ETC User Software for PC  CAT III 500 V / CAT IV 300 V				1	
Database for up to 50,000 objects  Automatic test sequence function  RS 232 port for RFID/barcode scanner  USB port for data transmission  **Just of the sequence function  **Just of the sequence fun		./	./	./	./
Automatic test sequence function  RS 232 port for RFID/barcode scanner  USB port for data transmission  V  V  V  V  CAT III 500 V / CAT IV 300 V					
RS 232 port for RFID/barcode scanner					
USB port for data transmission         ✓         ✓         ✓           Bluetooth® interface         —         —         ✓           ETC User Software for PC         ✓         ✓         ✓           CAT III 500 V / CAT IV 300 V         ✓         ✓         ✓					
Bluetooth® interface         —         —         ✓           ETC User Software for PC         ✓         ✓         ✓           CAT III 500 V / CAT IV 300 V         ✓         ✓         ✓					
ETC User Software for PC         ✓         ✓         ✓         ✓           CAT III 500 V / CAT IV 300 V         ✓         ✓         ✓         ✓		1	1	<b>/</b>	
CAT III 500 V / CAT IV 300 V					
		-			
DAKKS calibration certificate / / / /					
	DAKKS calibration certificate	<b>✓</b>		<b>✓</b>	<u> </u>

So-called live measurement is only advisable if there is no bias current within the system. Only suitable for motor circuit breaker with low nominal current.

<sup>&</sup>lt;sup>2</sup> Specified in the device, cannot be modified

<sup>&</sup>lt;sup>3</sup> Currently available languages: D, GB, I, F, E, P, NL, S, N, FIN, CZ, PL

#### **Data Interface**

Measurement data are transmitted to a PC via the integrated USB port, at which they can be printed in report form and archived.

#### Software update


The test instrument is always kept current thanks to firmware which can be updated via the USB port. Software is updated during the course of recalibration by our service department, or directly by the customer.

#### Sample Displays


#### **PROFITEST MASTER Test Instruments**

Softkeys allow for convenient selection of sub-functions and parameter settings. Unavailable sub-functions and parameters are automatically prevented from appearing at the display.


RCD Measurement

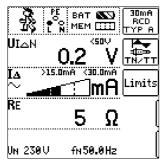


Loop Resistance Measurement

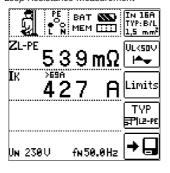


Earthing Resistance Measurement

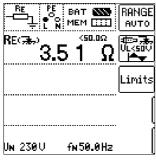

Low-Resistance Measurement

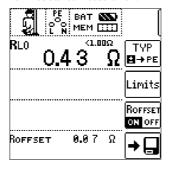

Voltage Measurement

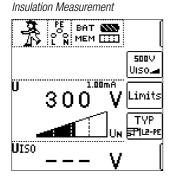

#### **Applicable Regulations and Standards**

IEC 61010-1 / EN 61010-1/ VDE 0411-1	Safety requirements for electrical equipment for measurement, control and laboratory use Part 1: General requirements (IEC 61010-1:2010 + Cor. :2011) Part 31: Safety requirements for hand-held probe assemblies for electrical measurement and test (IEC 61010-031:2002 + A1:2008)
IEC 61557/ EN 61557/ VDE 0413	Part1: General requirements (IEC 61557-1:2007) Part 2: Insulation resistance (IEC 61557-2:2007) Part 3: Loop impedance (IEC 61557-3:2007) Part 4: Resistance of earth connection and equipotential bonding (IEC 61557-4:2007) Part 5: Resistance to earth (IEC 61557-5:2007) Part 6: Effectiveness of residual current devices (RCD) in TT, TN and IT systems (IEC 61557-6:2007) Part 7: Phase sequence (IEC 61557-7:2007) Part 10:Electrical safety in low voltage distribution systems up to 1000 V AC and 1500 V DC — Equipment for testing, measuring or monitoring of protective measures (IEC 61557-10:2000)
EN 60529 VDE 0470, part 1	Test instruments and test procedures Degrees of protection provided by enclosures (IP code)
DIN EN 61326-1 VDE 0843-20-1	Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 1: General requirements
IEC 60364-6-61 VDE 0100, part 600	Low-voltage electrical installations – Part 6: Tests
IEC 60364-6-62 EN 50110-1 VDE 0105, part 100	Operation of electrical installations  – Part 100: General requirements
IEC 60364-7-710 VDE 0100, part 710	Erection of low-voltage installations  — Requirements for special installations or locations  — Part 710: Medical locations
IEC 61851-1 DIN EN 61851-1	Electric vehicle conductive charging system  – Part 1: General requirements

#### **Characteristic Values**

#### **Nominal Ranges of Use**

120 V (108 132 V) 230 V (196 253 V) 400 V (340 440 V)
16 <sup>2</sup> / <sub>3</sub> Hz (15.4 18 Hz) 50 Hz (49.5 50.5 Hz) 60 Hz (59.4 60.6 Hz) 200 Hz (190 210 Hz) 400 Hz (380 420 Hz)
65 550 V
15.4 420 Hz
sine
0 °C + 40 °C
8 12 V
Corresponds to $\cos \varphi = 1 \dots 0.95$
$<$ 50 k $\Omega$

				Input							Con	necti	ons		
Func- tion	Measured Quantity	Display Range	Reso- lution	Impedance/ Test Current	Measuring Range	Nominal Values	Measuring Uncertainty	Intrinsic Uncertainty	Plug Insert 1)	2-Pole Adapter	3-Pole Adapter	Probe		Clamps Z3512A	MFLEX P300
	U <sub>L-PE</sub>	0 99.9 V	0.1 V		90 600 V <sup>1)</sup>		±(2% rdg.+5d)	±(1% rdg.+5d)							
	U <sub>N-PE</sub>	100 600 V 15.0 99.9 Hz	1 V 0.1 Hz		15.4 420 Hz	U <sub>N</sub> = 120/230/	$\pm$ (2% rdg.+1d) $\pm$ (0.2% rdg.+1d)	±(1% rdg.+1d) ±(0.1% rdg.+1d)							
		100 999 Hz 0 99.9 V	1 Hz 0.1 V			400/500 V	±(3% rdg.+5d)	±(2% rdg.+5d)							
U	U <sub>3~</sub>	100 600 V	1 V	5 ΜΩ	90 600 V	$f_N = 16^2 / _3 / 50 /$	±(3% rdg.+1d)	±(2% rdg.+1d)							
	U <sub>PROBE</sub>	0 99.9 V 100 600 V	0.1 V 1 V		0 600 V	60/200/400 Hz	±(2% rdg.+5d) ±(2% rdg.+1d)	$\pm$ (1% rdg.+5d) $\pm$ (1% rdg.+1d)							
	U <sub>L-N</sub>	0 99.9 V 100 600 V	0.1 V 1 V		90 600 V <sup>1)</sup>		±(3% rdg.+5d) ±(3% rdg.+1d)	±(2% rdg.+5d) ±(2% rdg.+1d)							
	U <sub>IΔN</sub>	0 70.0 V	0.1 V	0.3 · I <sub>ΔN</sub>	5 70 V		+10% rdg.+1d	+1% rdg1d							
	$R_E/I_{\Delta N} = 10 \text{ mA}$	10 Ω 6.51 kΩ	10 Ω					+9% rdg.+1d							
	$R_E / I_{\Delta N} = 30 \text{ mA}$	3 Ω 999 Ω 1 kΩ 2.17 kΩ	3Ω 10Ω			$U_N = 120/230 \text{ V}$									
	$R_E / I_{\Delta N} = 100 \text{ mA}$	$1\Omega$ $651$ $\Omega$	1Ω		calculated value from	f <sub>N</sub> = 50/60 Hz									
	$R_E / I_{\Delta N} = 300 \text{ mA}$	0.3 Ω 99.9 Ω 100 Ω 217 Ω	0.3 Ω 1 Ω		$U_I\Delta N  /  I_\Delta N$	U <sub>I</sub> = 25/50 V									
$I_{\Delta N}$	$R_E / I_{\Delta N} = 500 \text{ mA}$	0.2 Ω 9.99 Ω 100 Ω 130 Ω	0.2 Ω 1 Ω			$I_{\Delta N} = 10/30/$									
I <sub>F</sub> _	$I_{\Delta} / I_{\Delta N} = 10 \text{ mA}$ $I_{\Delta} / I_{\Delta N} = 30 \text{ mA}$	3.0 13.0 mA	0.1 mA	3.0 13.0 mA	3.0 13.0 mA	100/300/500						optio nal			
_	$I_{\Delta} / I_{\Delta N} = 30 \text{ mA}$ $I_{\Delta} / I_{\Delta N} = 100 \text{ mA}$	9.0 39.0 mA 30 130 mA	1 mA	9.0 39.0 mA 30 130 mA	9.0 39.0 mA 30 130 mA	mA	±(5% rdg.+1d)	±(3.5% rdg.+2d)							
	$I_{\Delta}/I_{\Delta N} = 300 \text{ mA}$	90 390 mA	1 mA	90 390 mA	90 390 mA	$U_N^{1)} = 400 \text{ V}$	, ,	,							
	$I_{\Delta} / I_{\Delta N} = 500 \text{ mA}$ $U_{I\Delta} / U_{L} = 25 \text{ V}$	150 650 mA 0 25.0 V	1 mA	150 650 mA	150 650 mA 0 25.0 V	ON - 400 V	.100/ rdg .1d	+1% rdg1d							
	$U_{I\Delta} / U_{L} = 50 \text{ V}$ $t_{A} / I_{\Delta N}$	0 50.0 V 0 1000 ms	0.1 V 1 ms	wie I <sub>∆</sub> 1.05 · I <sub>∧N</sub>	0 50.0 V 0 1000 ms		+10% rdg.+1d	+9% rdg.+1 d	-						
	t <sub>A</sub> / 5 · I <sub>ΔN</sub>	0 40 ms	1 ms	5 · I <sub>ΔN</sub>	0 40 ms	$I_{\Delta N} = 10/30 \text{ mA}$	±4 ms	±3 ms							
	Z <sub>L-PE</sub> (full waves)	0 999 mΩ	1		0.15 0.49 Ω 0.50 0.99 Ω	U <sub>N</sub> = 120/230 V	±(10% rdg.+ 30d) ±(10% rdg.+ 30d)								
	Z <sub>L-N</sub>	1.00 9.99 Ω 0 999 mΩ	1 mΩ 0.01 Ω		1.00 9.99 Ω	$U_N = 400 \text{ V}^{-1}$	±(5% rdg.+ 3d)	±(3% rdg.+3d)	-						
_	Z <sub>L-PE</sub> DC+	$1.00 \dots 9.99 \Omega$ $10.0 \dots 29.9 \Omega$		0.653.4 A AC 0.5/1.25 A DC	1.00 9.99 Ω	500 V at Z <sub>L-PE</sub>	±(18% rdg.+30d) ±(10% rdg.+3d)	±(6% rdg.+50d) ±(4% rdg.+3d)	•	Z <sub>L-PE</sub>					
Z <sub>L-PE</sub> Z <sub>L-N</sub>	I <sub>K</sub>	0 A 999 A 1.00 kA 9.99 kA 10.0 kA 50.0 kA	1 A 10 A 100 A		120 (108 132) V 230 (196 253) V 400 (340 440) V	$t_{\rm N} = 16^2 /_3 / 50 / 60$ Hz	calculated val	ue from Z <sub>L-PE</sub>							
-L-N	7 (1E m/l)	$0.5 \dots 9.99 \Omega$	0.01 Ω			only display range		1 (00(M OD)							
	Z <sub>L-PE</sub> (15 mA)	10.0 99.9 $\Omega$ 100 999 $\Omega$	0.1 Ω 1 Ω		10 100 Ω 100 1000 Ω	U <sub>N</sub> = 120/230 V	±(10% v.M.+10D) ±(8% v.M.+2D)	±(2% v.M.+2D) ±(1% v.M.+1D)							
	I <sub>K</sub> (15 mA)	100 999 mA 0.00 9.99 A 10.0 99.9 A	1 mA 0.01 A 0.1 A	15 mA	calcul. value depends on $U_N$ and $Z_{L-PE}$ : $I_K = U_N / 101000 \Omega$	$f_N = 16^2 / \frac{3}{50/60}$ Hz	calculated value from $I_{K} = U_{N}/Z_{L}$	<sub>PE</sub> (15 mA)							
	R <sub>F</sub> (with probe)	0 999 mΩ 1.00 9.99 Ω	1 mΩ	0.65 3.4 A 0.65 3.4 A	0.15 Ω 0.49 Ω 0.50 Ω 0.99 Ω	U <sub>N</sub> = 120/230 V	±(10% rdg.+30d) ±(10% rdg.+30d)								
	[R <sub>F</sub> (without probe)	$10.0 \dots 99.9 \Omega$	0,01 Ω 0,1 Ω	0.65 3.4 A 400 mA	1.0 Ω9.99 Ω 10 Ω99.9 Ω	$\dot{U}_{N} = 400 \text{ V}^{-1}$	±(5% rdg.+3d) ±(10% rdg.+3d)	±(3% rdg.+3d) ±(3% rdg.+3d)							
RE	values as Z <sub>L-PE</sub> ]	100 999 Ω 1 kΩ 9.99 kΩ	1 Ω 0.01 kΩ	40 mA	100 Ω999 Ω	$f_N = 50/60 \text{ Hz}$	±(10% rdg.+3d)	±(3% rdg.+3d)							
-		0 999 mΩ	1 mΩ	4 mA 0.653.4 A AC	1 kΩ9.99 kΩ 0.25 0.99 Ω	II = 120/220 V	±(10% rdg.+3d) ±(18% rdg.+ 30d)	±(3% rdg.+3d) ±(6% rdg.+50D)	-						
	R <sub>E</sub> DC+ <del>←</del>	$1.00 \dots 9.99 \Omega$ $10.0 \dots 29.9 \Omega$	0,01 Ω 0.1 Ω	0.5/1.25 A DC	1.00 9.99 Ω	$f_N = 50/60 \text{ Hz}$	$\pm (10\% \text{ rdg.} + 3\text{d})$ $\pm (10\% \text{ rdg.} + 3\text{d})$	,							
	U <sub>E</sub>	0 253 V	1 V	_	calculated value										
R <sub>E</sub> Sel	R <sub>E</sub>	0 999 Ω	1 mΩ 1 Ω	0.653.4 A AC	0.25 300 Ω <sup>5)</sup>	see R <sub>E</sub>	±(20% rdg.+ 20 D)	±(15% rgd.+ 20 d)							
clip	R <sub>E</sub> DC+	0 999 Ω	1 mΩ 1 Ω	0.5/1.25 A DC	0.25 000 \$2	$U_N = 120/230 \text{ V}$ $f_N = 50/60 \text{ Hz}$	±(22% v.M.+20 D)	±(15% rdg.+ 20 d)							
EX- TRA	Z <sub>ST</sub>	0 30 MΩ	1 kΩ	2.3 mA at 230 V	10 kΩ 199 kΩ 200 kΩ 30 MΩ	$U_0 = U_{L-N}$	±(20% rdg.+2d) ±(10% rdg.+2d)	±(10% rdg.+3d) ±(5% rdg.+3d)							
		1 999 kΩ 1.00 9.99 MΩ	1 kΩ 10 kΩ			$U_{N} = 50 \text{ V}$									
		$10.0 \dots 49.9 \ \text{M}\Omega$	100 kΩ			I <sub>N</sub> = 1 mA									
		1 999 kΩ 1.00 9.99 MΩ	1 kΩ 10 kΩ			$U_{N} = 100 \text{ V}$ $I_{N} = 1 \text{ mA}$	kΩ range	$k\Omega$ range							
		10.0 99.9 MΩ 1 999 kΩ	100 kΩ 1 kΩ			IN - I IIIX	±(5% rdg.+10d)	±(3% rdg.+10d)							
R <sub>INS</sub>	R <sub>INS</sub> . R <sub>E INS</sub>	$1.00 \dots  9.99  \text{M}\Omega$	10 kΩ	$I_K = 1.5 \text{ mA}$	50 kΩ 500 MΩ	U <sub>N</sub> = 250 V	MΩ range	MΩ range							
		10.0 99.9 MΩ 100 200 MΩ	100 kΩ 1 MΩ			$I_N = 1 \text{ mA}$	±(5% rdg.+1d)	±(3% rdg.+1d)							
		1 999 kΩ 1.00 9.99 MΩ	1 kΩ 10 kΩ			U <sub>N</sub> = 500 V/									
		$10.0 \dots 99.9 \ \text{M}\Omega$	100 kΩ			1000 V I <sub>N</sub> = 1 mA									
	U	100 500 MΩ 25 1200 V–	1 MΩ 1 V		25 1200 V		±(3% rdg.+1d)	±(1.5% rdg.+1d)							
		0.01 Ω 9.99 Ω		I <sub>m</sub> ≥ 200 mA		$U_0 = 4.5 \text{ V}$		±(2% rdg.+2d)		•					

				Input							Con	nectio	ons		
Func-	Measured	Display Range	Reso-	Impedance/	Measuring Range	Nominal Values	Measuring	Intrinsic	Plug	2-Pole	3-Pole			Clamps	
tion	Quantity		lution	Test Current			Uncertainty	Uncertainty	Insert 1)	Adapter		Probe	WZ12C	Z3512A	MFLEX P300
		0 99.9 mA	0.1 mA		5 1000 mA <sup>3)</sup>		±(10% rdg.+8d)	±(4% rdg.+7d)							
		100 999 mA	1 mA		3 1000 IIIA		±(10% rdg.+3d)	±(4% rdg.+2d)							
		0 99.9 A	0.1 A		5 150 A <sup>3)</sup>		±(8% rdg.+2d)	±(3% rdg.+2d)							
		100 150 A	1 A		J 130 A		±(8% rdg.+1d)	±(3% rdg.+1d)							
		0 99.9 mA	0.1 mA				±(7% rdg.+8d)	±(4% rdg.+7d)							
		100 999 mA	1 mA		5 1000 mA <sup>4)</sup>		$\pm$ (5% rdg.+3d)	±(2% rdg.+2d)							
SEN-	L	1.0 9.99 A	0.01 A		0.05 10 A <sup>4)</sup>		±(4% rdg.+2d)	±(2% rdg.+2d)							
SOR	I <sub>L</sub> /Amp	10.0 99.9 A	0.1 A		0.5 100 A <sup>4)</sup>		$\pm$ (4% rdg.+2d)	±(2% rdg.+2d)							
		100 999 A	1 A		5 1000 A <sup>4)</sup>		$\pm$ (4% rdg.+1d)	±(2% rdg.+1d)							
		1.00 1.02 kA	0.01 kA				±(4% rdg.+1d)	±(2% rdg.+1d)							
		0 99.9 mA	0.1 mA	1 V/A	30 1000 mA <sup>4)</sup>	U <sub>N</sub> = 120/230/	±(7% rdg.+100d)	±(4% rdg.+100d)							
		100 999 mA	1 mA			400 V	±(6% rdg.+12d)	±(3% rdg.+12d)							
		1.0 9.99 A	0.01 A	100 mV/A	0,3 10 A <sup>4)</sup>	$f_N = 50/60 \text{ Hz}$	±(6% rdg.+12d)								
		10.0 99.9 A	0.1 A	10 mV/A	3 100 A <sup>4)</sup>	'N = 33/00 Hz	±(5% rdg.+11d)	±(2% rdg.+11d)							

<sup>1)</sup> U > 253 V, with 2 or 3-pole adapter only

**Key:** D = digits, rdg. = measured value (reading)

4) The measuring range respectively the transformation factor selected at the clamp (x 1, x 10, x 100, x 1000 mV/A) must be set in the "TYPE" menu with the selector switch in the SENSOR position.

#### **Reference Conditions**

Measured qty. waveform Sine (deviation between effective and

rectified value ≤ 0.1 %)

 $\begin{array}{lll} \text{Line impedance angle} & \cos \phi = 1 \\ \text{Probe resistance} & \leq 10 \ \Omega \\ \text{Supply power} & 12 \ V \pm 0.5 \ V \\ \text{Ambient temperature} & + 23^{\circ} \ C \pm 2 \ K \\ \text{Relative humidity} & 40\% \ to 60\% \\ \end{array}$ 

Finger contact For testing potential difference

to ground potential

Standing surface

insulation Purely ohmic

#### **Power Supply**

Rechargeable batteries 8 each AA 1.5 V,

we recommend only using the battery pack included in the standard equipment (pack of rechargeable batteries eneloop type AA HR6, 2000 mAh:

article no. Z502H)

Number of measurements (standard setup with illumination)

- For R<sub>ISO</sub> 1 measurement - 25 s pause: Approx. 1100 measurements

- For R<sub>LO</sub> Automatic polarity reversal / 1  $\Omega$  (1 measuring cycle) – 25 s pause:

Approx. 1000 measurements

Battery test Symbolic display of rechargeable battery voltage BAT STA

Battery saver circuit Display illumination can be switched off.

The test instrument is switched off automatically after the last key operation. The user can select the desired

on-time.

Safety shutdown If supply voltage is too low, the instru-

ment is switched off, or cannot be

switched on.

Recharging socket Installed rechargeable batteries can be

recharged directly by connecting a charger to the recharging socket:

MBASE/MTECH: Z502P

Charging time MBASE/MTECH charger (Z502P):

Approx. 4 hours \*

#### **Overload Capacity**

 $\begin{array}{ll} R_{ISO} & 1200 \text{ V continuous} \\ U_{L\text{-PE}}, \, U_{L\text{-N}} & 600 \text{ V continuous} \\ \text{RCD}, \, R_{\text{E}}, \, R_{\text{F}} & 440 \text{ V continuous} \end{array}$ 

Z<sub>L-PE</sub>, Z<sub>L-N</sub> 550 V (Limits the number of measurements and pause duration. If overload

occurs, the instrument is switched off by means of a thermostatic switch.) Electronic protection prevents switching on if interference voltage is present

Fine-wire

 $R_{LO}$ 

fuse protection FF 3.15 A 10 s, fuses blow at > 5 A

#### **Electrical Safety**

Protection class II per IEC 61010-1/EN 61010-1/

VDE 0411-1

Nominal voltage 230/400 V (300/500 V)

Test voltage 3.7 kV 50 Hz

Measuring category CAT III 500 V or CAT IV 300 V

Pollution degree 2

Fusing, L and N terminals 1 cartridge fuse-link ea.

FF 3.15/500G 6.3 x 32 mm

 $I_{\Delta N} = 500 \text{ mA, max. } U_N = 250 \text{ V}$ 

<sup>3)</sup> The measuring range respectively the transformation factor selected at the clamp ( $I_L$ =In: 1 mA...15 A/Out:1 mV/mA or lamp = 1...150 A/1 mV/A) must be set in the "TYPE" menu with the selector switch in the SENSOR position.

<sup>5)</sup> at R<sub>Eselektiv</sub>/R<sub>Egesamt</sub> < 100

Maximum charging time with fully depleted rechargeable batteries. A timer in the charger limits charging time to no more than 4 hours.

#### **Electromagnetic Compatibility (EMC)**

FN 61326-1:2006 Product standard

1 TOUGUST STATIGATO	LIN 01020-1.2000	
Interference emission		Class
EN 55022		A
Interference immunity	Test Value	Feature
EN 61000-4-2	Contact/atmos. – 4 kV/8 kV	
EN 61000-4-3	10 V/m	
EN 61000-4-4	Mains connection – 2 kV	
EN 61000-4-5	Mains connection – 1 kV	
EN 61000-4-6	Mains connection – 3 V	
EN 61000-4-11	0.5 period / 100%	

#### **Ambient Conditions**

Accuracy 0 to + 40 °C Operation  $-5 \text{ to} + 50 \,^{\circ}\text{C}$ 

Storage -20 to +60 °C (without rechargeable

batteries)

Relative humidity Max. 75%, no condensation allowed

Elevation Max. 2000 m

#### **Mechanical Design**

Display Multiple display with dot matrix,

128 x 128 pixels

**Dimensions** W x L x D: 260 x 330 x 90 mm Weight

MBASE/MTECH: approx. 2.3 kg with

batteries

Protection Housing: IP 40, test probe: IP 40 per

EN 60529/DIN VDE 0470, part 1

#### **Data Interfaces**

USB slave for PC connection Type


RS 232 for barcode and RFID scanners Type

#### Scope of delivery:

- Test instrument
- Earthing contact plug insert (country-specific)
- 2-pole measuring adapter and 1 cable for expansion into a 3-pole adapter (PRO-A3-II)
- 2 Alligator clips
- Shoulder strap
- Set of rechargeable batteries (Z502H)
- Battery charger: MBASE/MTECH (Z502P)
- Condensed operating instructions
- CD ROM with Operating instructions
- DAkkS calibration certificate
- USB cable

#### Special Functions with PROFITEST MTECH

#### Tripping Test for Type B, AC/DC Sensitive RCDs □ with Rising DC **Residual Current and Measurement of Tripping Current**

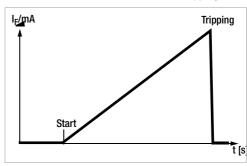

With the selector switch in the  $I_{\text{F}}$  position, slowly rising current flows via N and PE. The momentary measured current value is continuously displayed. When the RCCB is tripped, the last

measured current value is displayed. A greatly reduced rate of increase is used for delayed RCCBs (type S).


#### Tripping Test for Type B, AC/DC Sensitive RCDs with Constant DC Residual Current and Measurement of Tripping Time

With the selector switch set to the respective nominal residual current, twice the selected nominal current flows via N and PE. Time to trip is measured for the RCCB and displayed.

#### Loop Resistance Measurement with Suppression of RCD Tripping


The test instruments make it possible to measure loop impedance in TN systems with type A, F and type AC RCCBs (10, 30, 100, 300, 500 mA nominal residual current).

The respective test instrument generates a DC residual current to this end. which saturates the RCCB's magnetic circuit. The test instrument then superimposes a measuring current which only demonstrates half-waves of like polarity. The RCCB is no longer

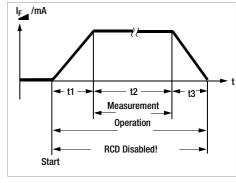


capable of detecting this measuring current, and is consequently not tripped during measurement.

#### Selective Earthing Resistance Measurement (mains powered)

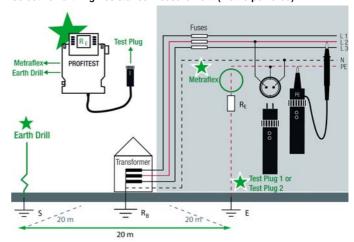


#### ETC User Software for PC (scope of delivery)

Creation of Individualized Test Structures at a PC and Transfer to the Test Instrument

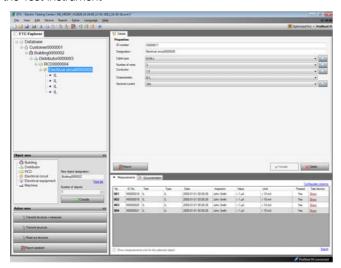

#### Editing of Selection Lists

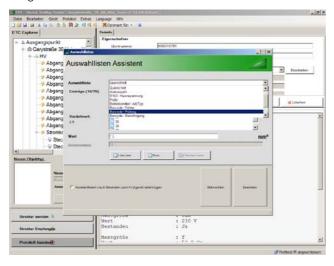

#### Report Generating



#### **Report Generating Accessories**

#### PROTOKOLLmanager Professional

Report generating software for documenting electrical tests in accordance with BGV A3, VDE 0100 and VDE 0701-0702 with unlimited customer management.

#### **ELEKTROmanager**

Software for measurement and documentation of electrical devices and electrical installations.

ELEKTROmanager represents a new generation of software for data logging and data management, as well as for controlling test sequences used by electricians concerned with effectiveness, technical competence and legal security. Use is easy to learn and self-explanatory to a great extent. All common measuring instruments supplied by other manufacturers can be interconnected, i.e. after purchasing a new GMC-I Messtechnik GmbH instrument the customer can continue using an older instrument from another manufacturer.

#### **PS3 Software for Test Instruments**

PS3 reads in measurement data acquired with test instruments and organizes them automatically according to activity, i.e. testing, maintenance and inspection. Only a few quick work steps are required for the generation of ready-to-sign test reports and handover reports.

Standard requirements, for example reading in measurement data and report printing, are fulfilled with the basic module and the device module. Other requirements including following up on deadlines, test data history and selection of any desired data for generating lists, right on up to complete object management (equipment and buildings), are handled by the add-on module and any required additional modules.

Data can be exported from PS3 to the test instrument.

An overview of PS3's performance features can be accessed at our website.

#### Report and List Generation with PC.doc-WORD $^{\text{\tiny TM}}/\text{EXCEL}^{\text{\tiny TM}}$

Prerequisite: Microsoft®WORD™ or Microsoft®EXCEL™ PC.doc-WORD™/EXCEL™ inserts test results and data entered at the test instrument input module into report or list forms. These can then be supplemented and printed out with Microsoft® WORD™ or Microsoft®EXCEL™.

#### Test Data Management with PC.doc-ACCESS™

Prerequisite: PC.doc-ACCESS™

PC.doc-ACCESS™ manages device, machine, equipment, master and test data. Available test data are automatically entered to master data and test data lists which are assigned to individual customers.

Data are represented in accordance with the respective test regulation. Data are displayed as lists or in data sheet format, and can be sorted and filtered in a variety of different ways.

Complete test data management is thus made possible.

Reports and deadline lists can be printed out for selectable ID number ranges and dates.

## PROFITEST | MBASE MTECH

## **DIN VDE 0100/IEC 60364-6 Testers**

PROFISCAN ETC (ring binder with barcodes) – Z502G Barcode scanner for connection to RS 232 port at tester – Z502F



#### Barcode and label printer for USB connection to a PC - Z721D

Barcode/label printer for connection to a PC, for self-adhesive, smudge-proof barcode labels, for identifying devices and system components. Devices and system components can be logged by our test instruments, and acquired measured values can be allocated to them with the scanner.



#### SCANBASE RFID reader for connection to RS 232 port at tester - Z751G



The Z751G RFID reader is preprogrammed to scan the following RFD tags.

ווו בונעי	90.			
Order No.	Frequency	Standard	Туре	Quantity per Package
Z751R	13.56 MHz	ISO 15693	approx. 22 mm dia., self-adhesive	500 pieces
Z751S	13.56 MHz	ISO 15693	approx. 30 x 2 mm dia. with 3 mm hole	500 pieces
Z751T	13.56 MHz	ISO 15693	Pigeon ring, approx. 10 mm dia.	250 pieces

See separate ID systems data sheet regarding barcode scanners and printers, as well as RFID readers.

#### **Power Supply Accessories**

**Z502H Master Battery Pack** 




#### **Accessory Plug Inserts and Adapters**

Country specific Plug Inserts PRO-Schuko

PRO-W



#### Magnetic measuring contacts (Patent) with magnetic strain relief (Z502Z)

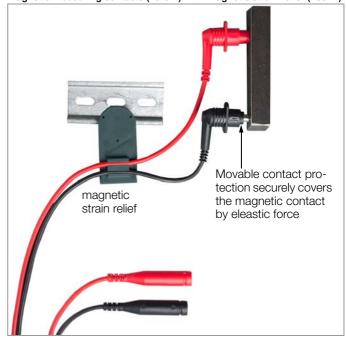

## PROFITEST | MBASE MTECH

## **DIN VDE 0100/IEC 60364-6 Testers**

#### PRO-RLO-II Plug Insert

#### PRO-UNI-II Plug Insert



#### 3-Phase Current Adapters



A3-16, A3-32 and A3-63
3-phase adapters are used for trouble-free connection of test instruments to 5-pole CEE outlets. The three variants differ with regard to plug size, which corresponds respectively to 5-pole CEE outlets with current ratings of 16, 32 and 63 A. Phase sequence is indicated with lamps at all three variants. Testing the effectiveness of safety

measures is conducted via five 4 mm contact protected sockets.

#### Variable Plug Adapter Set



Three self-retaining, contact protected test probes for the connection of measurement cables with 4 mm banana plugs, or with contact protected plugs for sockets with an opening of 3.5 mm to 12 mm, e.g. CEE, Perilex sockets etc. For example,

the test probes also fit the square PE jacks on Perilex sockets. Maximum allowable operating voltage: 600 V per IEC 61010.

#### KS24 Cable Set



The KS24 cable set includes a 4 m long extension cable with a permanently attached test probe at one end and a contact protected socket at the other end, as well as an alligator clip which can be plugged onto the test probe.

#### ISO Calibrator 1

Calibration adapter for rapid, efficient testing of the accuracy of measuring instruments for insulation resistance and low-value resistors

#### Telearm1 Telescoping Rod



#### Floor Probe



The 1081 floor probe makes it possible to measure the resistance of insulating floors in accordance with DIN VDE 0100, part 600, and EN 1081.



#### WZ12C

Current clamp sensor for leakage current, selectable measuring ranges: 1 mA to 15 A, 3% and 1 A to 150 A, 2% Transformation ratios: 1 mV/mA, 1 mV/A

#### METRAFLEX P300



Flexible current clamp sensor for selective earthing resistance measurement 3/30/300 A, 1 V/100 mV/10 mV/A



Z3512A

AC Current
Sensor Clamp

Switchable measuring ranges: 1 mA to 1/100/1000 A~ Transformation ratios: 1 V/A, 100mV/A, 10 mV/A, 1 mV/A

# PROFITEST | MBASE MTECH

## **DIN VDE 0100/IEC 60364-6 Testers**

#### **Earthing Resistance Measurement Accessories**

#### TR25 Reel



#### TR50 Drum with 50m Measurement Cable



50 m measurement cable coiled onto a metal drum. Connection to the inside end of the cable is made possible with a socket integrated into the drum. The other end is equipped with a banana plug. The drum axle with handle can be removed for space saving storage.

Cable resistance can be compensated for with the rotary selector switch in the  $R_{LO}$  position.

#### SP350 Earth Drill



#### **Accessory Cases and Trolleys**

#### Ever-ready case for PROFITEST MASTER (Z502X)



#### SORTIMO L-BOXX GM (Z503D)



Foam insert for SORTIMO L-BOXX GM (Z503E)



#### Profi-Case (Z502B)



Outside dimensions: H x W x D 390 x 590 x 230 mm

Plastic system case Outside dimensions:

450 x 255 x 355 mm Foam insert Z503E for tester and accessories, has to be ordered seperately, see below.

 $W \times H \times D$ 



### E-CHECK Case (Z502M)

Outside dimensions: H x W x D 390 x 590 x 230 mm

Sample Contents





#### F2000 Universal Carrying Pouch



Test instrument, plug inserts, measuring adapters, replacement batteries, recording charts etc. can be stored in a clear-cut fashion and conveniently transported in the F2000 carrying pouch.

Outside dimensions:
380 x 310 x 200 mm (without buckles, handle and carrying strap)

#### F2020 Large Universal Carrying Pouch



Outside dimensions: W x H x D 430 x 310 x 300 mm (without buckles, handle and carrying strap)

#### Trolley for Profi-Case (Z502B) and E-CHECK Case (Z502N)

Folded-up dimensions: 395 x 150 x 375 mm



#### **Order Information**

	Туре	Article Number
PROFI <b>TEST</b> Master Instrument Va		
Universal protective measure test instru		
3, 4, 5, 6, 7 and 10 with integrated me		
mains powered earthing resistance me		or a detailed overview of
performance features and page 6 for s	cope of delivery.	
Basic Instrument	PROFITEST MBASE	M520M
Same as basic instrument plus the		
following special functions:		
<ul> <li>(Rechargeable) battery powered</li> </ul>		
measurements:		
Earthing resistance (3/4-wire)		
Soil resistivity		
Selective earthing resistance		
Earth loop resistance		
<ul> <li>Automatic test sequence function</li> </ul>	PROFITEST Mpro *	M520N *
Same as basic instrument plus the		
following special functions:		
<ul> <li>Tripping test for AC/DC sensitive</li> </ul>		
RCDs and loop impedance mea-		
surement without tripping the RCD	PROFITEST MTECH	M5200
Same as basic instrument plus		
numerous special functions:		
<ul> <li>Tripping test for AC/DC sensitive</li> </ul>		
RCDs and loop impedance measure-		
ment without tripping the RCD		
- Testing of IMDs		
<ul> <li>Testing of RCMs per EN 61557,</li> </ul>		
part 11		
(Rechargeable) battery powered		
measurements:		
Earthing resistance (3/4-wire)		
Soil resistivity		
Selective earthing resistance		
Earth loop resistance  Leakage current measurement		
Residual voltage test		
- III.eIIIyeIII IaIIIp  - Automatic test seguence function		
<ul> <li>Automatic test sequence function</li> </ul>	PROFI <b>TEST</b> MXTRA *	M520P *
<ul> <li>Automatic test sequence function</li> <li>Bluetooth<sup>®</sup> interface</li> </ul>	PROFITEST MXTRA *  MXTRA (3-349-646-03)	M520P *
<ul> <li>Automatic test sequence function</li> <li>Bluetooth® interface</li> <li>* see data sheet PROFITEST MPRO</li> </ul>	Mxtra (3-349-646-03)	M520P *
<ul> <li>Automatic test sequence function</li> <li>Bluetooth<sup>®</sup> interface</li> <li>* see data sheet PROFITEST MPRO</li> <li>Test Instrument Power Supply Acc</li> </ul>	Mxtra (3-349-646-03)	M520P *
Automatic test sequence function     Bluetooth® interface     see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with	Mxtra (3-349-646-03)	M520P *
Automatic test sequence function     Bluetooth® interface     see data sheet PROFITEST MPRO Test Instrument Power Supply Acc B LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/	MXTRA (3-349-646-03) essories	
<ul> <li>Automatic test sequence function</li> <li>Bluetooth® interface</li> <li>* see data sheet PROFITEST MPRO</li> <li>Test Instrument Power Supply Acc</li> <li>8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/Sanyo), 2000 mAh with sealed cells</li> </ul>	Mxtra (3-349-646-03)	M520P * Z502H
<ul> <li>Automatic test sequence function</li> <li>Bluetooth® interface</li> <li>* see data sheet PROFITEST MPRO</li> <li>Test Instrument Power Supply Acc</li> <li>B LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/Sanyo), 2000 mAh with sealed cells</li> <li>Broad-range charger for charging</li> </ul>	MXTRA (3-349-646-03) essories	
<ul> <li>Automatic test sequence function</li> <li>Bluetooth® interface</li> <li>* see data sheet PROFITEST MPRO</li> <li>* Test Instrument Power Supply Acc</li> <li>* LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/Sanyo), 2000 mAh with sealed cells</li> <li>Broad-range charger for charging batteries included in the PROFITEST</li> </ul>	MXTRA (3-349-646-03) essories	
Automatic test sequence function     Bluetooth® interface     see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH	MXTRA (3-349-646-03) essories  MASTER Battery Set	
- Automatic test sequence function - Bluetooth® interface * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc B LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER	Z502H
- Automatic test sequence function - Bluetooth® interface 's see data sheet PROFITEST MPRO B LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH nput: 100 to 240 V AC Dutput: 16.5 V DC, 0.6 A	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger	
- Automatic test sequence function - Bluetooth® interface * see data sheet PROFITEST MPRO B LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger	Z502H
- Automatic test sequence function - Bluetooth® interface * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A,	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger ers	Z502H Z502P
- Automatic test sequence function - Bluetooth® interface * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc.	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger	Z502H
- Automatic test sequence function - Bluetooth® interface  * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger ers  PRO-Schuko	Z502H  Z502P  GTZ3228000R0001
- Automatic test sequence function - Bluetooth® interface  * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger ers  PRO-Schuko PRO-W	Z502H  Z502P  GTZ3228000R0001  Z503A
- Automatic test sequence function - Bluetooth® interface  * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug Plug insert per SEV: CH	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger ers  PRO-Schuko  PRO-W PRO-CH	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001
- Automatic test sequence function - Bluetooth® interface  * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug Plug insert per SEV: CH Plug insert with adapters for GB & USA	MXTRA (3-349-646-03) PROFITEST MASTER MBASE MTECH Charger PRO-Schuko PRO-W PRO-CH PRO-GB/USA-Set	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001  Z503B
- Automatic test sequence function - Bluetooth® interface  * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug Plug insert per SEV: CH Plug insert with adapters for GB & USA	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger ers  PRO-Schuko  PRO-W PRO-CH	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001
- Automatic test sequence function - Bluetooth® interface * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug Plug insert per SEV: CH Plug insert with adapters for GB & USA Plug insert for South Africa	MXTRA (3-349-646-03) PROFITEST MASTER MBASE MTECH Charger PRO-Schuko PRO-W PRO-CH PRO-GB/USA-Set	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001  Z503B
- Automatic test sequence function - Bluetooth® interface * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug Plug insert per SEV: CH Plug insert with adapters for GB & USA Plug insert for South Africa 2/3-pole measuring adapter for 3-	MXTRA (3-349-646-03) PROFITEST MASTER MBASE MTECH Charger PRO-Schuko PRO-W PRO-CH PRO-GB/USA-Set	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001  Z503B
- Automatic test sequence function - Bluetooth® interface * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug Plug insert per SEV: CH Plug insert with adapters for GB & USA Plug insert for South Africa 2/3-pole measuring adapter for 3- phase and rotating-field systems,	MXTRA (3-349-646-03) PROFITEST MASTER MBASE MTECH Charger PRO-Schuko PRO-W PRO-CH PRO-GB/USA-Set	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001  Z503B
- Automatic test sequence function - Bluetooth® interface * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug Plug insert with adapters for GB & USA Plug insert with adapters for GB & USA Plug insert for South Africa 2/3-pole measuring adapter for 3- phase and rotating-field systems, 300 V/1 A CAT IV with safety cap	MXTRA (3-349-646-03) PROFITEST MASTER MBASE MTECH Charger PRO-Schuko PRO-W PRO-CH PRO-GB/USA-Set	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001  Z503B
- Automatic test sequence function - Bluetooth® interface * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug Plug insert per SEV: CH Plug insert with adapters for GB & USA Plug insert with adapters for GB & USA Plug insert for South Africa 2/3-pole measuring adapter for 3- phase and rotating-field systems, 300 V/1 A CAT IV with safety cap 600 V/1 A CAT III with safety cap	MXTRA (3-349-646-03) PROFITEST MASTER MBASE MTECH Charger PRO-Schuko PRO-W PRO-CH PRO-GB/USA-Set	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001  Z503B
— Automatic test sequence function — Bluetooth® interface  * see data sheet PROFITEST MPRO  Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A  Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug Plug insert per SEV: CH Plug insert with adapters for GB & USA Plug insert for South Africa 2/3-pole measuring adapter for 3-phase and rotating-field systems, 300 V/1 A CAT IV with safety cap 600 V/1 A CAT III without safety cap	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger ers  PRO-Schuko  PRO-W PRO-CH PRO-GB/USA-Set PRO-RSA	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001  Z503B  Z501A
— Automatic test sequence function — Bluetooth® interface  * see data sheet PROFITEST MPRO  * see data sheet PROFITEST MPRO  * SET Instrument Power Supply Acc  8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/Sanyo), 2000 mAh with sealed cells  Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC  Output: 16.5 V DC, 0.6 A  **Accessory Plug Inserts and Adaptoration of the PROFITEST MBASE MTECH Input: 100 to 240 V AC  Output: 16.5 V DC, 0.6 A  **Accessory Plug Inserts and Adaptoration of the Plug insert plug insert (Schuko): D, A, NL, F etc.  same as PRO-Schuko, however with angled earth-contact plug  Plug insert with adapters for GB & USA  Plug insert with adapters for GB & USA  Plug insert for South Africa  2/3-pole measuring adapter for 3-phase and rotating-field systems, 300 V/1 A CAT IV with safety cap  600 V/1 A CAT III with safety cap  600 V/1 A CAT III without safety cap  600 V/16 A CAT III without safety cap  same as PRO-A3-II, however with	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger ers  PRO-Schuko  PRO-W PRO-CH PRO-GB/USA-Set PRO-RSA	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001  Z503B  Z501A
— Automatic test sequence function — Bluetooth® interface  * see data sheet PROFITEST MPRO  Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A  Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug Plug insert per SEV: CH Plug insert for South Africa 2/3-pole measuring adapter for 3-phase and rotating-field systems, 300 V/1 A CAT IV with safety cap 600 V/1 A CAT III without safety cap same as PRO-A3-II, however with straight cables of 10 m each instead	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger ers  PRO-Schuko  PRO-W PRO-CH PRO-GB/USA-Set PRO-RSA  PRO-A3-II	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001  Z503B  Z501A
Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC OUTPUT: 100 to 240 V AC OUTPUT: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug Plug insert with adapters for GB & USA Plug insert with adapters for GB & USA Plug insert for South Africa 2/3-pole measuring adapter for 3-phase and rotating-field systems, 300 V/1 A CAT IV with safety cap 600 V/1 A CAT III with safety cap 600 V/1 A CAT III without safety cap same as PRO-A3-II, however with straight cables of 10 m each instead of coil cables	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger ers  PRO-Schuko  PRO-W PRO-CH PRO-GB/USA-Set PRO-RSA	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001  Z503B  Z501A
- Automatic test sequence function - Bluetooth® interface * see data sheet PROFITEST MPRO Test Instrument Power Supply Acc 8 LSD NiMH rechargeable batteries with reduced self-discharging (AA) (eneloop/ Sanyo), 2000 mAh with sealed cells Broad-range charger for charging batteries included in the PROFITEST MBASE MTECH Input: 100 to 240 V AC Output: 16.5 V DC, 0.6 A Accessory Plug Inserts and Adapte Earth contact plug insert (Schuko): D, A, NL, F etc. same as PRO-Schuko, however with angled earth-contact plug Plug insert with adapters for GB & USA Plug insert for South Africa 2/3-pole measuring adapter for 3- phase and rotating-field systems, 300 V/1 A CAT IV with safety cap 600 V/1 A CAT III without safety cap same as PRO-A3-II, however with straight cables of 10 m each instead	MXTRA (3-349-646-03) essories  MASTER Battery Set  PROFITEST MASTER MBASE MTECH Charger ers  PRO-Schuko  PRO-W PRO-CH PRO-GB/USA-Set PRO-RSA  PRO-A3-II	Z502H  Z502P  GTZ3228000R0001  Z503A  GTZ3225000R0001  Z503B  Z501A

Designation	Туре	Article Number
With 3 connector cables for any connection standards, 300 V / 16 A, CAT IV	PRO-UNI-II	7501R
2 magnetic measurement contacts	PRO-UNI-II	ZOUTK
with contact protection – Set with magnetic holder, measurement con-		
tacts 5,5 mm in diameter insulated,		
CAT III 1.000 V / 4 A, temperature		
between –10 °C and 60 °C, under standard conditions and flat-head		
screws holding force 1.200 g vertical		
to contact area; measuring instrument	Set 3 – Magn. Measuring	
connector: 4 mm sockets for PRO-A3-II	Tips	Z502Z
5-pole 3-phase adapter for 16 A CEE outlets	A3-16	GTZ3602000R0001
5-pole 3-phase adapter for 32 A		
CEE outlets	A3-32	GTZ3603000R0001
5-pole 3-phase adapter for 63 A CEE outlets	A3-63	GTZ3604000R0001
Variable Plug Adapter Set	Z500A	Z500A
Calibration adapter for testing of the		
accuracy of measuring instruments		
for insulation resistance and low- value resistors	ISO Calibrator 1	M662A
Accessories	ISO Calibrator 1	IVIOUZA
Extension cable. 4 m	KS24	GTZ3201000R0001
Telescoping rod for PE measurement	Telearm 1	GTZ3232000R0001
Triangular probe for floor measure-		
ments in accordance with EN 1081 and DIN VDE 0100	1081 Probe	GTZ3196000R0001
Current clamp sensor for leakage	1001 P1000	G123190000R0001
current, switchable: 1 mA to 15 A,	_	
3% and 1 A to 150 A, 2%	WZ12C <sup>D</sup>	Z219C
Flexible AC current sensor, 3, 30, 300 A, 1 V, 100 mV, 10 mV / A, with		
batteries, probe length: 45 cm	METRAFLEX P300	Z502E
Earthing Resistance Measurement		
Current clamp sensor for selective		
earth measurement and as <b>clamp</b>		
<b>meter</b> for 2-clamp measuring method (ground loop measurement),		
switchable measuring ranges:		
0 to 1/100/1000 A~ AV~	705 ( 0 A D)	70054
± (0.7% to 0.2%)  Reel with 25 m measurement cable	Z3512A <sup>D)</sup> TR25 Reel	Z225A GTZ3303000R0001
Drum with 50 m measurement cable		GTY1040014E34
Earth drill, 35 cm long, for earth	11100 Diulii	G111070017L04
measurement	SP350 Earth Drill	GTZ3304000R0001
Accessory Cases and Trolleys		
Ever-ready case with bags for acces-	Ever-ready Case	75007
sories Stackable case, empty, with inserts for	PROFITEST MASTER Instrument Master	Z502X
PROFITEST MASTER and accessories	Case	Z502A
Aluminum case for test instrument	E OUEOU O	750014
and accessories The E-CHECK case can be mounted	E-CHECK Case Trolley for	Z502M
to the trolley.	E-CHECK Case	Z502N
Universal carrying pouch	F2000 <sup>D</sup>	Z700D
Large universal carrying pouch	F2020	Z700F
Plastic system case	SORTIMO L-BOXX GM	Z503D
Foam insert for SORTIMO L-BOXX GM with divider for PROFITEST MASTER	Foam SORTIMO L-BOXX Profitest M	Z503E
MILLI GINIAGIEN FOR THE STEEL IN AGIET	L-DOVY LIGHTEST IAI	LJUJE

Designation	Туре	Article Number
Profi-hardcase with imprint and de-		
viders for sets with Profitest Master		
and accessories incl. trolleyholder	Profi-Case	Z502W
Starter Packages		
Consisting of <b>PROFITEST MBASE</b> ,		
variable plug adapter set and F2000		
universal carrying pouch	BASE Starter Package	M500M
Consisting of <b>PROFITEST MTECH</b> ,		
variable plug adapter set and plastic		
system case SORTIMO L-BOXX GM	TEOLOGI I D. I	MEGON
with foam insert	TECH Starter Package	M500N
Consisting of <b>PROFITEST MTECH</b> ,		
variable plug adapter set, SP350		
earth spike, TR50 metal drum, PRO-RLO II adapter and instrument		
master case (Z502A)	TECH Master Package	M500P
Consisting of <b>PROFITEST MTECH</b> ,	ILUITIVIASIEI FAUKAYE	IVIJUUF
variable plug adapter set and E-		
CHECK case	E-CHECK Set	M500U
Consisting of <b>PROFITEST MXTRA</b> ,	L OFFICITOR	IVIOOOO
VARIO-STECKER-Set, plastic system		
case SORTIMO L-BOXX GM with		
foam insert, MASTER Battery Set		
and MPRO MXTRA Charger	XTRA Starter Package	M500V
Consisting of PROFITEST MXTRA.		
VARIO-STECKER-Set, Profi Case,		
PRO-RLO-II, MASTER Battery Set		
and MPRO MXTRA Charger	XTRA Master Package	M500W
Consisting of <b>PROFITEST MXTRA</b> ,		
VARIO-STECKER-Set, Profi Case,		
leakage current measuring adapter		
PRO-AB, MASTER Battery Set and	VTDA MED Da also se	MEDOV
MPRO MXTRA Charger	XTRA MED Package	M500X
Consisting of <b>PROFITEST MXTRA</b> ,		
VARIO-STECKER-Set, Profi Case, ge-		
nerator clamp E-Clip 2 and Current		
clamp sensor for earth measure- ment Z3512A, measuring adapter		
for connecting a second clamp PRO-		
RE-2, MASTER Battery Set and		
MPRO MXTRA Charger	XTRA Profi Package	M500Y
Report Generating Accessories		
See separate ID systems data sheet reg	garding barcode scanners/	printers and RFID reader
Barcode scanner for RS 232 con-	RS 232 Profiscanner	
nection with roughly 1 m coil cable	for Barcodes	Z502F
Ring binder with preprinted barcodes		-
for scanning (German)	PROFISCAN ETC D	Z502G
RFID reader/writer	SCANBASE RFID	Z751G
PC analysis software		
Further information regarding softwar	e is available on the Inter	net at·
i araior imormation regarding softwar	o io avaiiabio UII tilo IIItol	not at.
http://www.gossenmetrawatt.com		

Data sheet available

http://www.gossenmetrawatt.com

 $(\rightarrow \text{Products} \rightarrow \text{Software} \rightarrow \text{Software for Testers})$ 

Edited in Germany • Subject to change without notice • PDF version available on the Internet



GMC-I Messtechnik GmbH Südwestpark 15 90449 Nürnberg • Germany Phone: +49 911 8602-111 Fax: +49 911 8602-777 E-mail: info@gossenmetrawatt.com www.gossenmetrawatt.com